

Edit	Start Loop	Time Delay	GPX Sys	INIT Memory	Edge	Mod Sys	Font INQ	ACT Pages Inq	Row Insert	Char Insert
Write	Stop Loop	DYN Mode	Exit Write	SINGL Dual	Char	TAB Set	Char INQ	Page Inq	Row DEL	Char Delete

Read File	Save Auto
Disk Dir	Save Page
Disk Menu	Save All Pages
Set Disk	Save Color Palet
Run	Stop

STANDARD KEYBOARD

Word Pref	Row Pref	Page Pref
Clear	Clear EOS	Clear SCRN
Beg Line	↑	PREV Page
←	Home	→
End Line	↓	Next Page

Color	Char Color	BKD Color	EXT Video
Scan Color	Color Palet	Under Line	Text Adj
Contr	Left Jstfy	Right Jstfy	Text Jstfy
Page Sel	Ital	Font	T A K E
Dynamic Toggle	DSP Toggle		

Laird Legend Character Generator

The everyday CG stuff to know:

Loading fonts:

Press the **Disk Dir** button on the left hand side of the keyboard.
A menu with a variety of options should pop up.

-Find "**Fonts**" (it should be #7)

Press 7 on the keyboard

A directory with many fonts should appear

-To select a font **press the # or letter** that is in front of it

-there are *different sizes* with each font

The computer should load the font and return to the blank page

Choosing fonts for a page:

Press the "**Font**" button on the bottom right hand corner

-Now select your font again to apply it to the page

-

Changing position of words on page:

-to **center** a line of text place cursor at the beginning of the line

-press "**center**" button (located on right side)

-you may also "right justify"

To apply attributes to an entire page

-**Home**

-**Page Preference**

Then the attribute (**Clear, Center, Font, Background Color, Font, Font Color, Edge** ETC)

*****The text you type will automatically be in PREVIEW. To move the text from preview to PROGRAM hit the **TAKE** key (Lower Right hand Button)

To erase text

- With Cursor in Home Position "**clear screen**" For a new page:
- press "next page". (middle near bottom)

To move to different pages:

For Previous Page

- press "**prev page**

or "**Next Page**"

To put and edge or shadow around font:

- press the **edge** button (the very top of the keyboard bottom row middle) -select the edge type press the number or letter

To make a **Moving Page**

- press "**DYN MODE**" TOP panel of buttons) -press **roll** or **crawl**
- set rate by typing) in number (1=slow)
- set toggle loop to on if you want it to repeat
- Take the page (screen will be blank)

To Start the Roll or Crawl"

Press **Dynamic- Toggle** button on- the very bottom left hand side).